

5.0 REPLACEMENT PARTS

5.1 Pinch Tube Valve Assembly, Figure 3

Item	Description	Stock No.
(-)	Pinch Tube Grit Valve Assembly	04319
(-)	Pinch Tube Air Valve Assembly	04320
1.	Body, pinch valve, machined	05677
2.	Body, actuator (includes items 6 & 7)	05678
3.	Spring chamber	05663
4.	Cap screw, 5/16-NC x 1"	03152
5.	Nut, 5/16-NC wing	03213
6.	Bushing, actuator body	05684
7.	Seal, actuator body	05685
8.	Plunger, actuator	05676
9.	Shaft, actuator	05670
10.	Return spring	05686
11.	Plate, return spring	05687

12.	Screw, flat head, 1/4-NC x 5/8"	03090
13.	Pinch tube, 1-1/4" ID for air valve	07730
	1" ID for grit valve	04635
14.	Flanged adaptor	05673
15.	Flanged adaptor, 45 degree	05672
16.	O-ring	01990
17.	Inspection plate	02440
18.	Cover plate	05674
19.	Clamp assembly kit	20660
20.	Flat washer, s/s	05694
21.	Adaptor, 1/4" NPS	02494
22.	Petcock	01993
23.	Lock-stud assembly, includes item 24	05691
24.	Nut, lock-stud, 1/2-10	07628
25.	Metering knob assembly	05072
26.	Tee, 1/4" NPT brass	02025
27.	Nipple, 1/4" NPT x 2"	01828
28.	Plug, lock-stud port	05683
29.	Warning label and decal kit	20661

